



**Step 1**  
Remove bolt, nut and washer connecting the 2 halves of the Smartop together. Next, attach the EAS inner plate to the Smartop cover re-using bolt, nut and washer and the (3) flat head screws and locknuts. *Note: Insert the bolt into the large washer then through the EAS inner plate and brackets. The small washer goes before the locknut* (See Fig. 1).

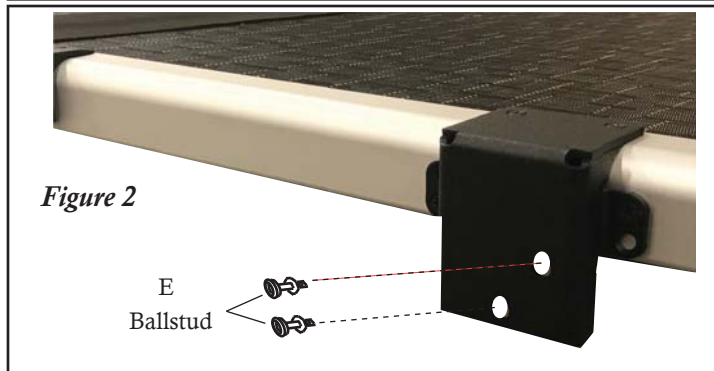



**Step 2**  
Install the ballstuds and locknuts to the shock mount bracket (See Fig. 2).

**Step 3**  
Attach the shocks to the EAS shock mounting bracket with the black body pointing towards the front of the cover. Next motion the front half of the Smartop into the vertical position and position the shock ends on the EAS inner plate (See Fig. 3). *Note: Make sure the foam pad on the shock end is pointing away from the spa.*

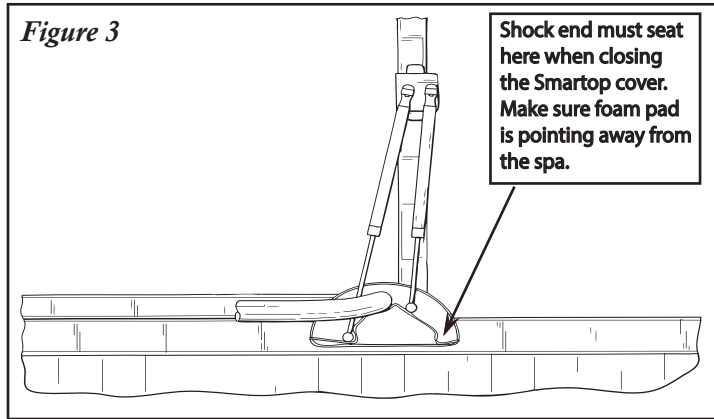

**Step 4**  
Attach the EAS handle to the EAS outer plate with the 5/16 x 1-1/4" long flat head cap screw (See Fig. 5).

**Step 5**  
Attach the EAS outer plate to the inner plate with the 1/4 x 1-1/4" long flat head cap screws (See Fig. 4).

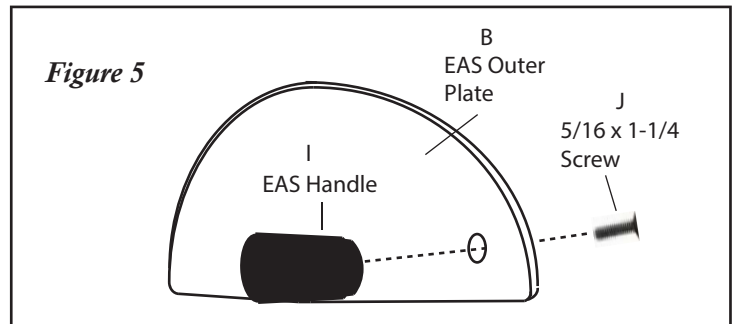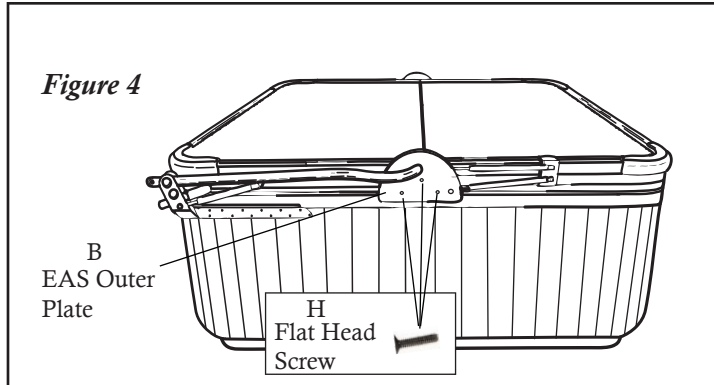

ITEM	PART#	DESCRIPTION	QTY
A(L)	101355	EAS INNER PLATE - LEFT	1
A(R)	101357	EAS INNER PLATE - RIGHT	1
B(L)	101359	EAS OUTER PLATE - LEFT	1
B(R)	101361	EAS OUTER PLATE - RIGHT	1
C	101592	1/4 X 3/4" FLAT HEAD SOCKET HEAD SCREW	6
D	100607	1/4 LOCKNUT	6
E	100244	5/16 BALL STUD	4
F	100032	5/16 NYLON LOCKNUT	4
H	101593	1/4 X 1-1/4" FLAT HEAD SOCKET HEAD SCREW	6
I	101596	EAS HANDLE	2
J	101595	5/16 X 1-1/4" FLAT HEAD SOCKET HEAD SCREW	2